


**2.8l – Injection Engine, 6–Cylinder, Code AHA**

1998 m. y.

**Fuse Panel :**

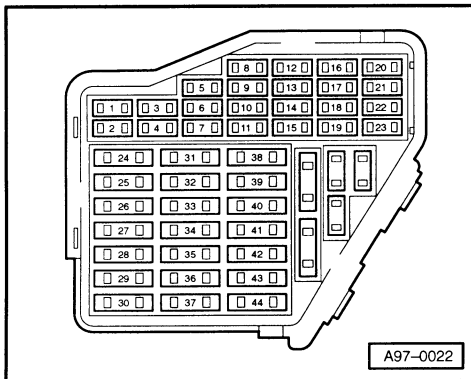


**Fuse Colors :**

- 30 A – Green
- 25 A – White
- 20 A – Yellow
- 15 A – Blue
- 10 A – Red

Fuse in fusebox from 23 onwards are numbered 223 onwards in Current Flow Diagram.


**Micro Central Electric :**

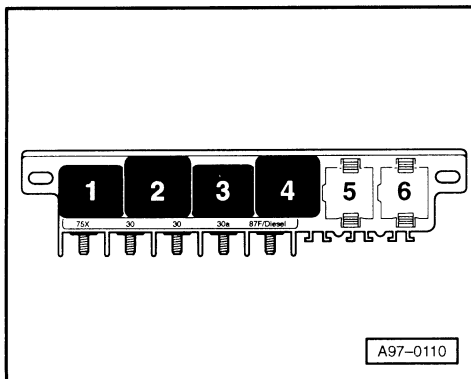

**Relay Location :**

- 1** – Dual Horn Relay
- 2** – Load Reduction Relay
- 4** – Fuel Pump (FP) Relay
- 5** – Wipper / Washer Intermittent Relay
- 6** – Wipper / Washer Intermittent Relay

3-way Relay Carrier:

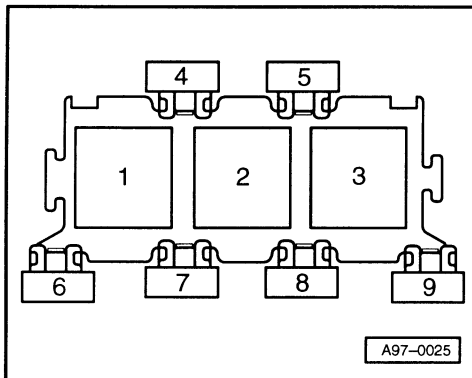


Relay Location :

**2** – Secondary Air Injection (AIR) Relay

Fuse Location :

**7** – Fuse for Secondary Air Pump



13-way Relay Carrier:

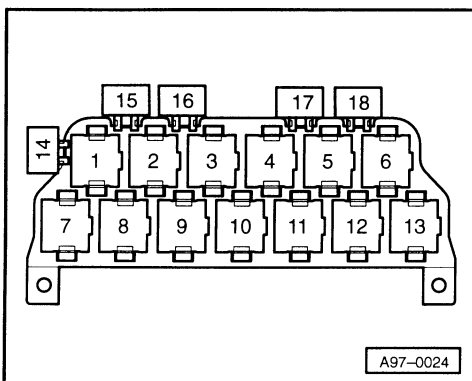

Relay Location :


**7** – Fog Light Relay

 **13** – Park / Neutral Position (PNP) Relay

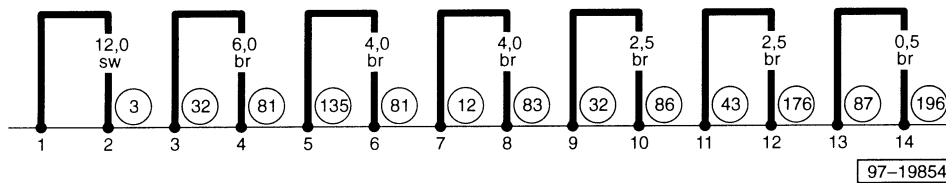


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- 3 - Ground strap, engine to body
- 12 - Ground connection, in engine compartment, left
- 32 - Ground connection, behind instrument panel, left
- 43 - Ground connection, on right A-pillar
- 81 - Ground connection -1-, in instrument panel wiring harness
- 83 - Ground connection -1-, in right front wiring harness
- 86 - Ground connection -1-, in rear wiring harness
- 87 - Ground connection -2-, in rear wiring harness
- 135 - Ground connection -2-, in instrument panel wiring harness
- 176 - Ground connection, in right headlight wiring harness
- 196 - Ground connection -3-, in wiring harness, rear

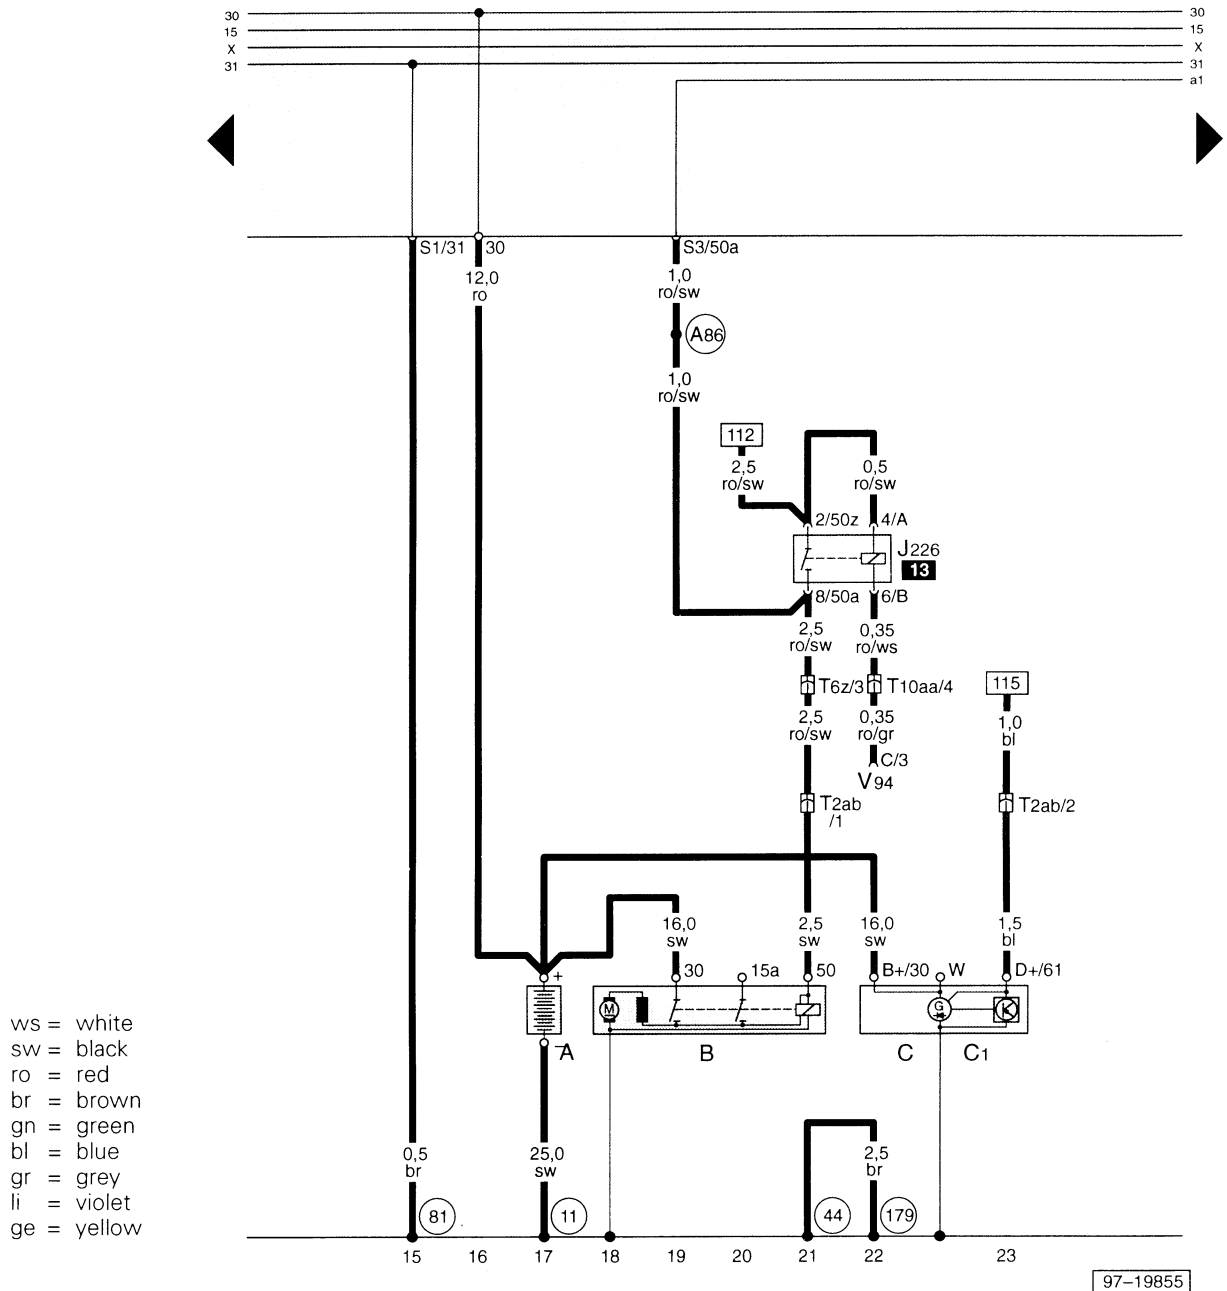


- A - Battery
- B - Starter
- C - Generator (GEN)
- C1 - Voltage Regulator (VR)
- J226 - Park / Neutral Position (PNP) Relay
- T2ab - Wire Connector, double, grey, in engine compartment, right
- T6z - Wire Connector, 6 Point, red, connector station, electronics box in plenum chamber
- T10aa - Wire Connector, 10 Point, orange, connector station left, A-pillar
- V94 - Central Locking / Alarm System / Interior Light Delay Control Module
- (11) - Ground connection, in battery box
- (44) - Ground connection, on left A-pillar, lower part

- (81) - Ground connection -1-, in instrument panel wiring harness
- (179) - Ground connection, in left headlight wiring harness
- (A86) - Connector (50a), in instrument panel wiring harness

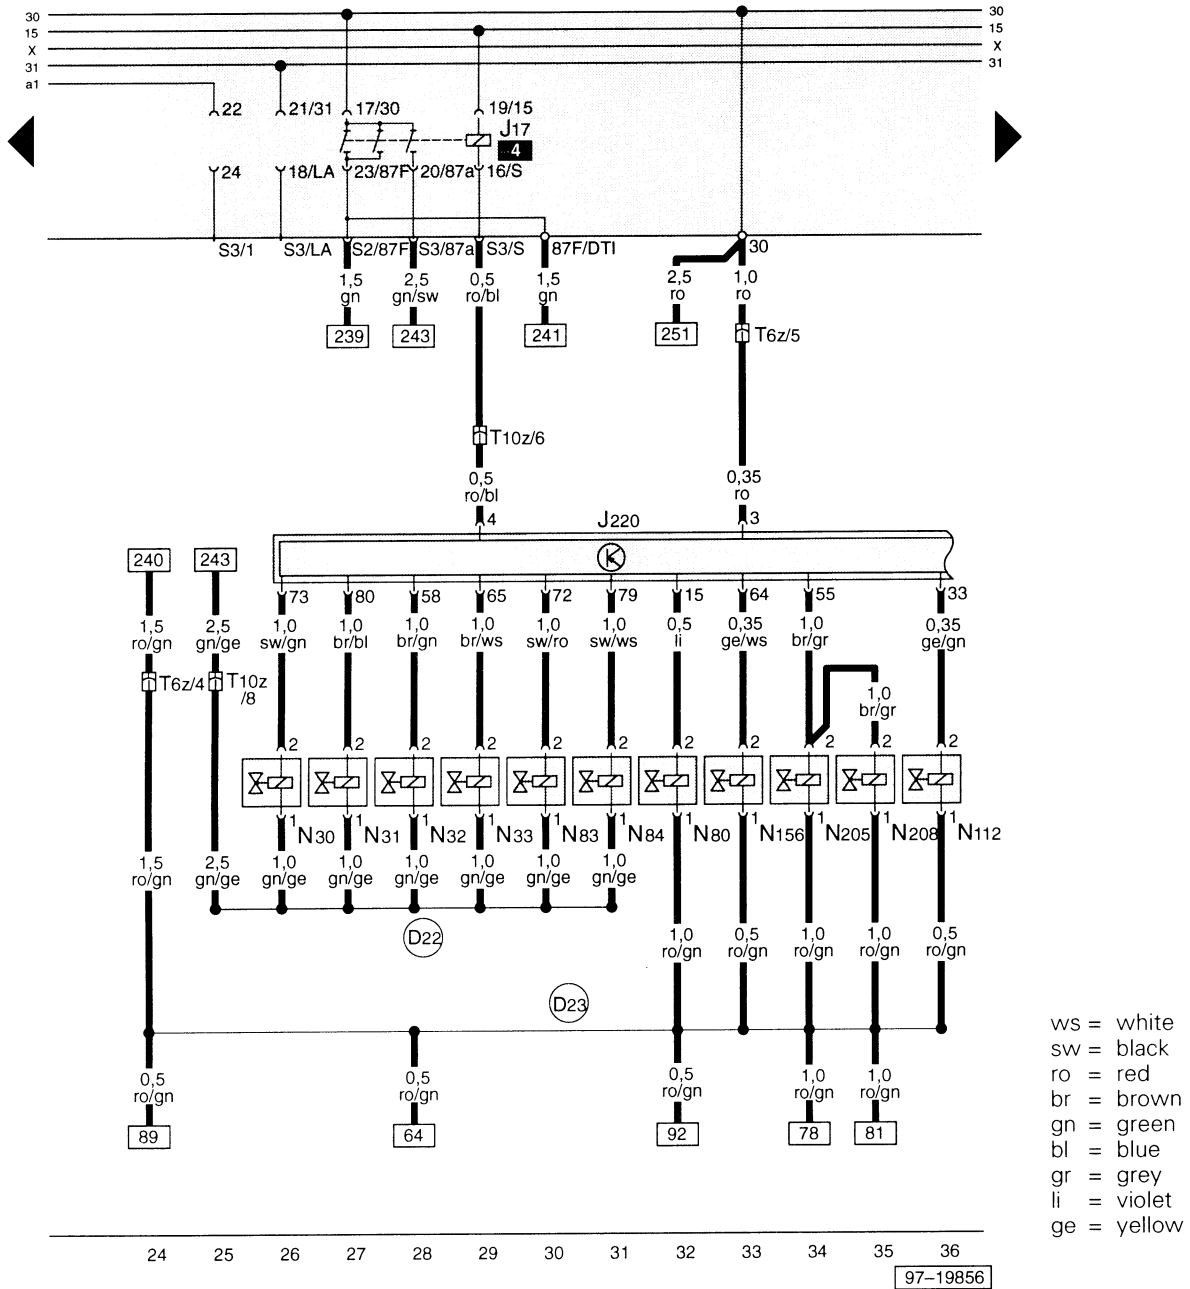

- J17 - Fuel Pump (FP) Relay
- J220 - Motronic Engine Control Module (ECM)
- N30 - Injector, Cyl. 1
- N31 - Injector, Cyl. 2
- N32 - Injector, Cyl. 3
- N33 - Injector, Cyl. 4
- N80 - Evaporative (EVAP) Canister Purge Regulator Valve
- N83 - Injector, Cyl. 5
- N84 - Injector, Cyl. 6
- N112 - Secondary Air Injection (AIR) Solenoid Valve
- N156 - Intake Manifold Change-Over Valve
- N205 - Valve -1- for camshaft adjustment
- N208 - Valve -2- for camshaft adjustment
- T6z - Wire Connector, 6 Point, red, connector station, electronics box in plenum chamber



- T10z - Wire Connector, 10 Point, yellow, connector station, electronics box in plenum chamber
- (D22) - Connector (over fuse 234), in wiring harness front, right
- (D23) - Connector (over fuse 229), in wiring harness front, right

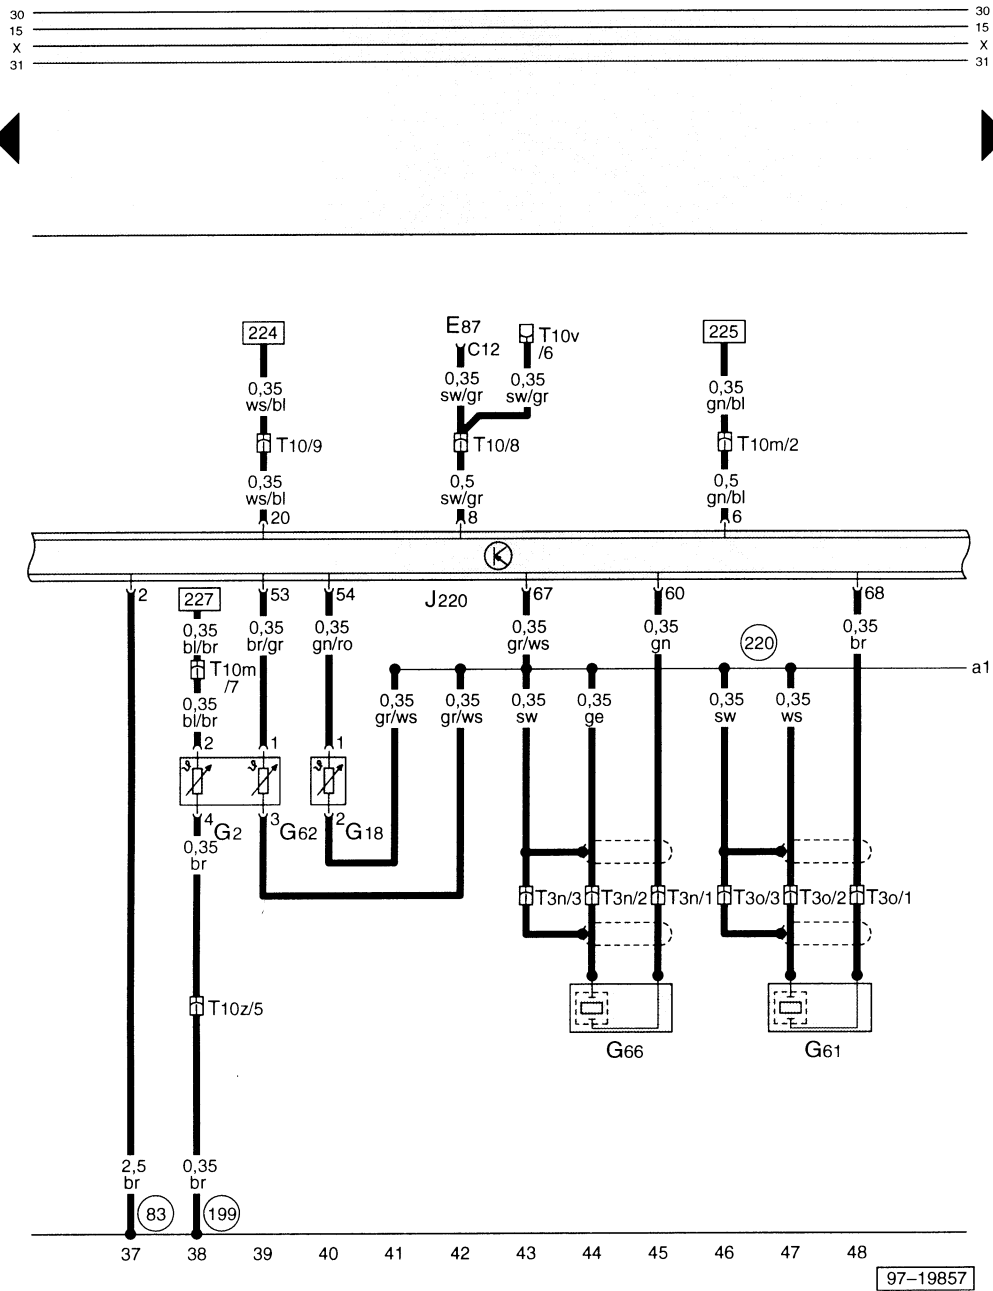

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- E87 - A/C Control Head
- G2 - Engine Coolant Temperature (ECT) Sensor
- G18 - Temperature Sensor II
- G61 - Knock Sensor (KS) 1
- G62 - Engine Coolant Temperature (ECT) Sensor
- G66 - Knock Sensor (KS) 2
- J220 - Motronic Engine Control Module (ECM)
- T3n - Wire Connector, 3 Point, blue, in engine compartment, left
- T3o - Wire Connector, 3 Point, blue, in engine compartment, right
- T10 - Wire Connector, 10 Point, brown, connector station, electronics box in plenum chamber
- T10m - Wire Connector, 10 Point, black, connector station, electronics box in plenum chamber
- T10v - Wire Connector, 10 Point, brown, connector station right, A-pillar

 
- T10z - Wire Connector, 10 Point, yellow, connector station, electronics box in plenum chamber
- 83 - Ground connection -1-, in right front wiring harness
- 199 - Ground connection -3-, in instrument panel wiring harness
- 220 - Ground connection (sensor ground), in engine compartment wiring harness

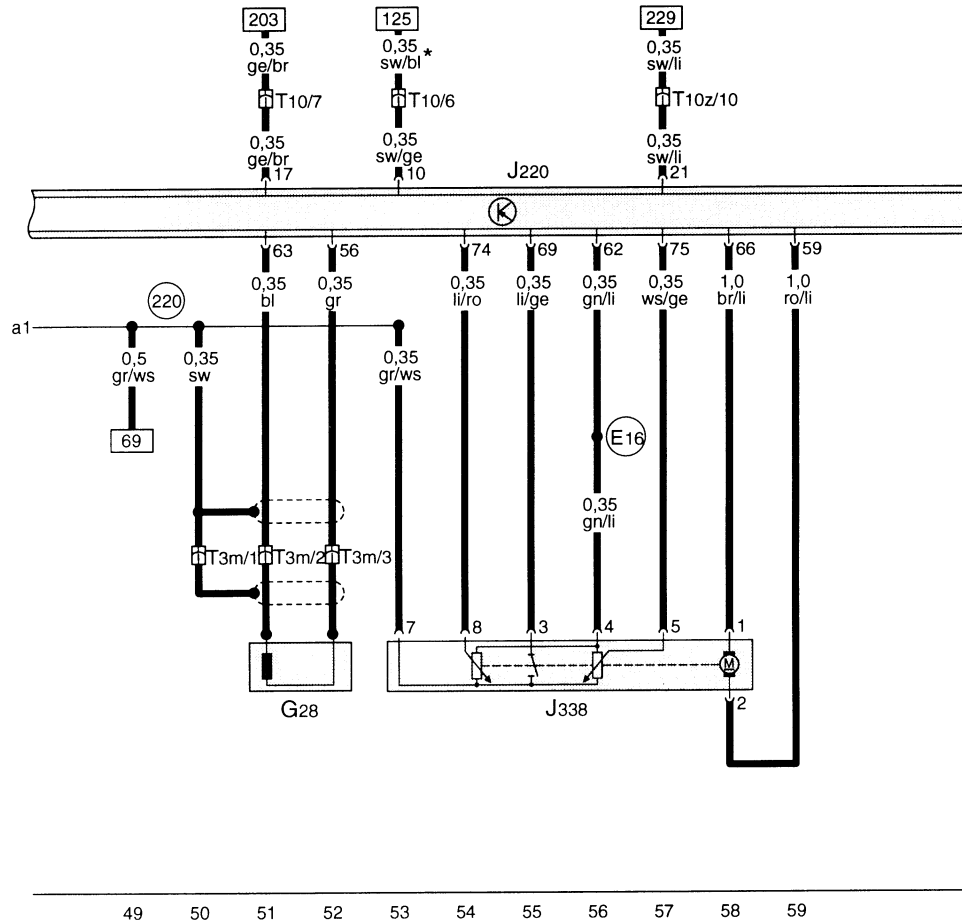

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

97-19858

- G28 - Engine Speed (RPM) Sensor
- J220 - Motronic Engine Control Module (ECM)
- J338 - Throttle Valve Control Module
- T3m - Wire Connector, 3 Point, grey, in engine compartment, left
- T10 - Wire Connector, 10 Point brown, connector station, electronics box in plenum chamber
- T10z - Wire Connector, 10 Point yellow, connector station, electronics box in plenum chamber
- (220) - Ground connection (sensor ground), in engine compartment wiring harness
- (A64) - Connector (30, idle boost), in instrument panel wiring harness
- (E16) - Plus connection (5 Volts), in Motronic Multiport Fuel Injection (MFI) wiring harness
- \* - Quattro Only


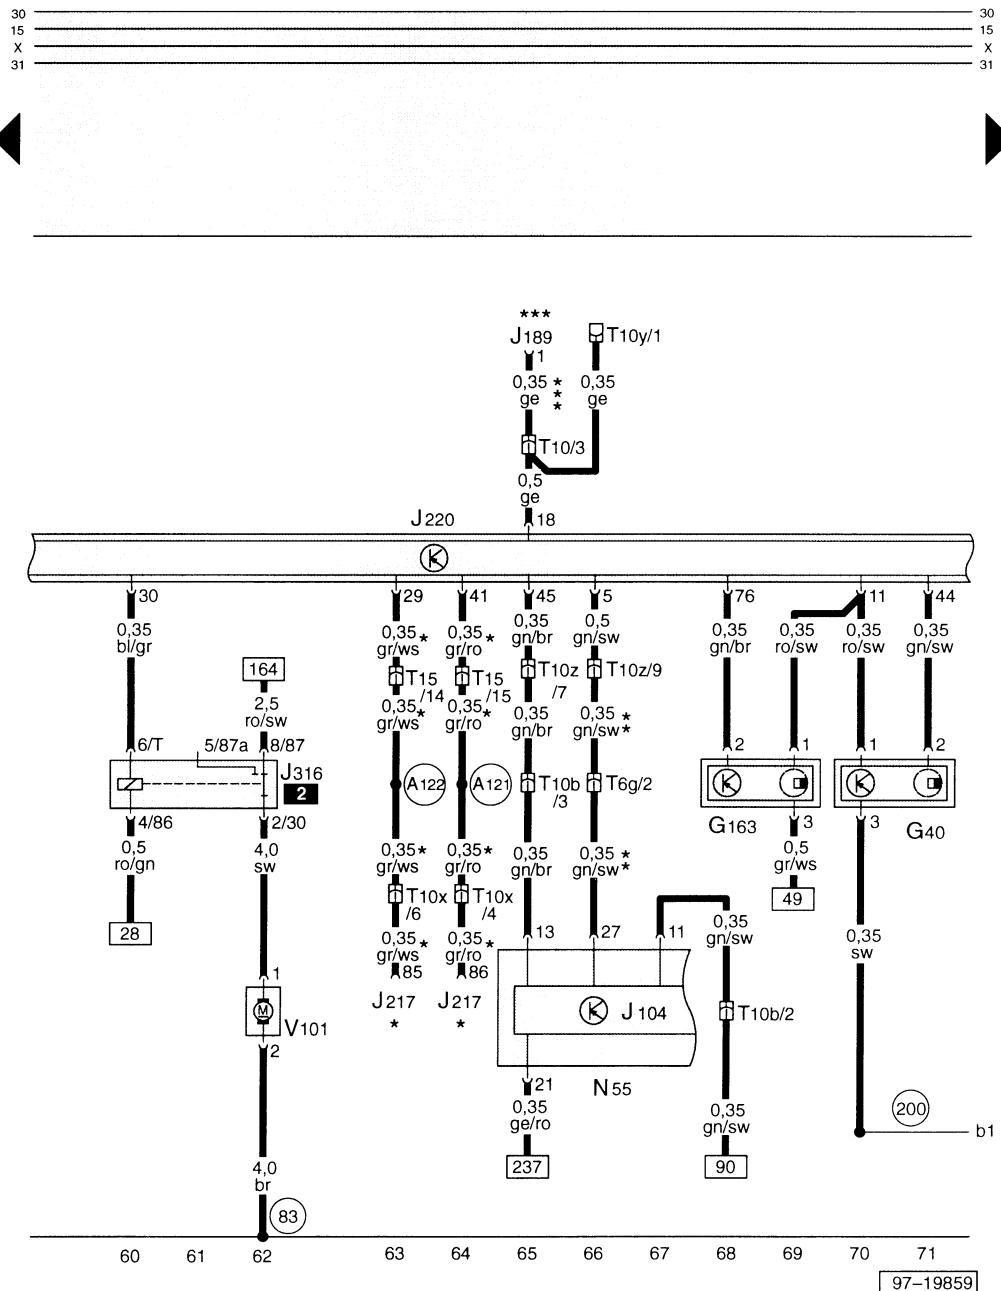


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- G40 - Camshaft Position (CMP) Sensor
- G163 - Camshaft Position (CMP) Sensor 2
- J104 - ABS Control Module
- J189 - Auto Check System
- J217 - Transmission Control Module (TCM)
- J220 - Motronic Engine Control Module (ECM)
- J316 - Secondary Air Injection (AIR) Relay
- N55 - ABS Hydraulic Unit
- T6g - Wire Connector, 6 Point, grey, connector station right, A-pillar
- T10 - Wire Connector, 10 Point, brown, connector station, electronics box in plenum chamber
- T10b - Wire Connector, 10 Point, orange, connector station left, A-pillar
- T10x - Wire Connector, 10 Point, blue, connector station right, A-pillar
- T10y - Wire Connector, 10 Point, blue, connector station, electronics box in plenum chamber



- T10z - Wire Connector, 10 Point, yellow, connector station, electronics box in plenum chamber
- T15 - Wire Connector, 15 Point, white, connector station, electronics box in plenum chamber
- V101 - Secondary Air Injection (AIR) Pump Motor

 - (83) - Ground connection -1-, in front wiring harness
- (200) - Ground connection (shielding), in engine compartment wiring harness
- (A121) - Connector (High-Bus), in instrument panel wiring harness
- (A122) - Connector (Low-Bus), in instrument panel wiring harness
- \* - Automatic Transmission Only
- \*\* - ASC Only
- \*\*\* - Auto Check System Only

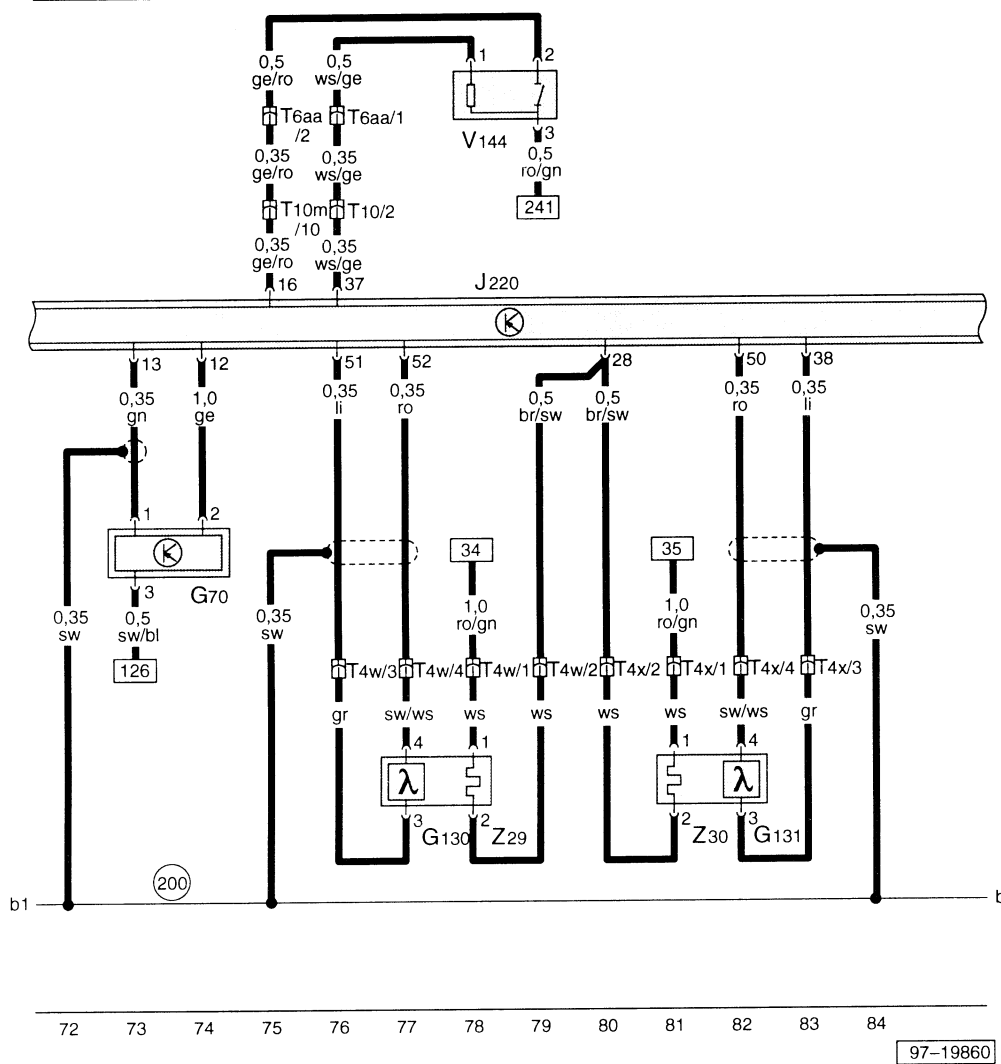

- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

 - G70 - Mass Air Flow (MAF) Sensor
- G130 - Oxygen Sensor (OS2) Behind Three Way Catalytic Converter (TWC)
- G131 - Oxygen Sensor (OS2) 2 Behind Three Way Catalytic Converter (TWC)
- J220 - Motronic Engine Control Module (ECM)
- T4w - Wire Connector, 4 Point, green, in engine compartment, right
- T4x - Wire Connector, 4 Point, brown, in engine compartment, right
- T6aa - Wire Connector, 6 Point, brown, connector station right, A-pillar
- T10 - Wire Connector, 10 Point, brown, connector station, electronics box in plenum chamber
- T10m - Wire Connector, 10 Point, black, connector station, electronics box in plenum chamber
- V144 - Diagnosis pump for fuel system
- Z29 - Heater for Lambda-probe 1
- Z30 - Heater for Lambda-probe 2
- (200) - Ground connection (shielding), in engine compartment wiring harness

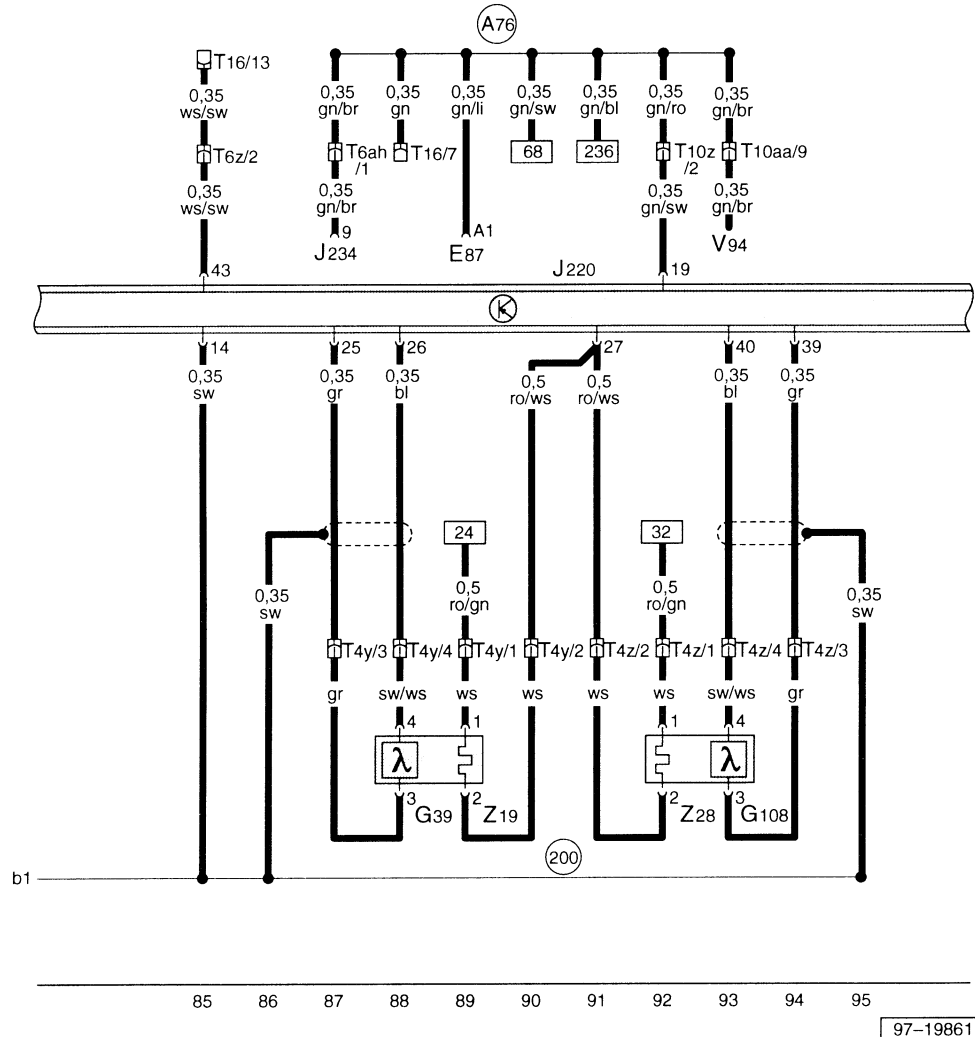


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

97-19861

- E87 - A/C Control Head
- G39 - Heated Oxygen Sensor (HO2S) 1
- G108 - Heated Oxygen Sensor (HO2S) 2
- J220 - Motronic Engine Control Module (ECM)
- J234 - Airbag Control Module
- T4y - Wire Connector, 4 Point, black, in engine compartment, right
- T4z - Wire Connector, 4 Point, black, in engine compartment, left
- T6z - Wire Connector, 6 Point, red, connector station, electronics box in plenum chamber
- T6ah - Wire Connector, 6 Point, green, connector station right, A-pillar
- T10z - Wire Connector, 10 Point, yellow, connector station, electronics box in plenum chamber
- T10aa - Wire Connector, 10 Point, orange, connector station right, A-pillar
- V94 - Central Locking / Alarm System / Interior Light Delay Control Module
- Z19 - Oxygen Sensor (O2S) I Heater
- Z28 - Oxygen Sensor (O2S) II Heater
- (200) - Ground connection (shielding), in engine compartment wiring harness
- (A76) - Connector (K-diagnosis wire), in instrument panel wiring harness

30	30
15	15
X	X
31	31

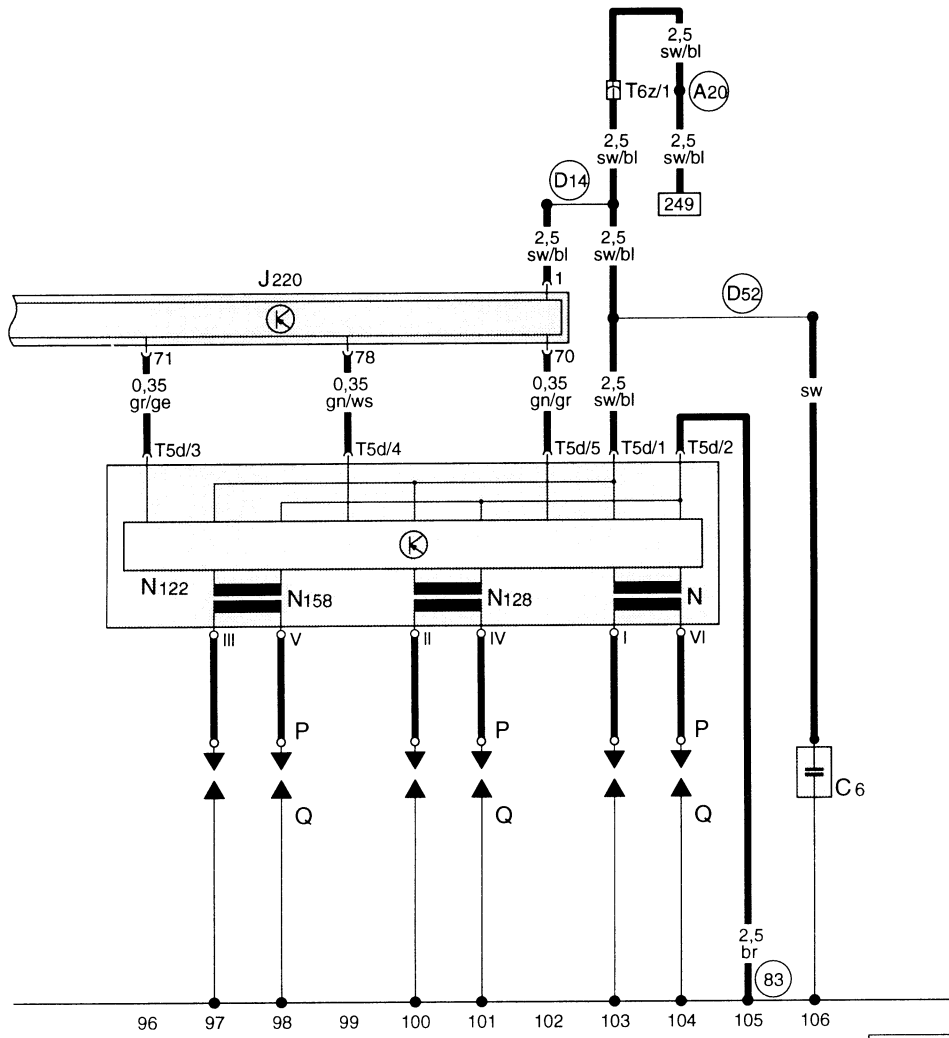


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

97-19862

- C6 - Distributor Ignition (DI) Capacitor
- J220 - Motronic Engine Control Module (ECM)
- N - Ignition Coil
- N122 - Power Output Stage
- N128 - Ignition Coil 2
- N158 - Ignition Coil 3
- P - Spark Plug Connector
- Q - Spark Plugs
- T5d - Wire Connector, 5 Point, near ignition coil
- T6z - Wire Connector, 6 Point, red, connector station, electronics box in plenum chamber
- (83) - Ground connection -1-, in right front wiring harness
- (D14) - Wire connection (ignition coil - control module), in right front wiring harness
- (A20) - Wire connection (15a), in instrument panel wiring harness

(D52) - Plus connection (15a), in engine compartment wiring harness

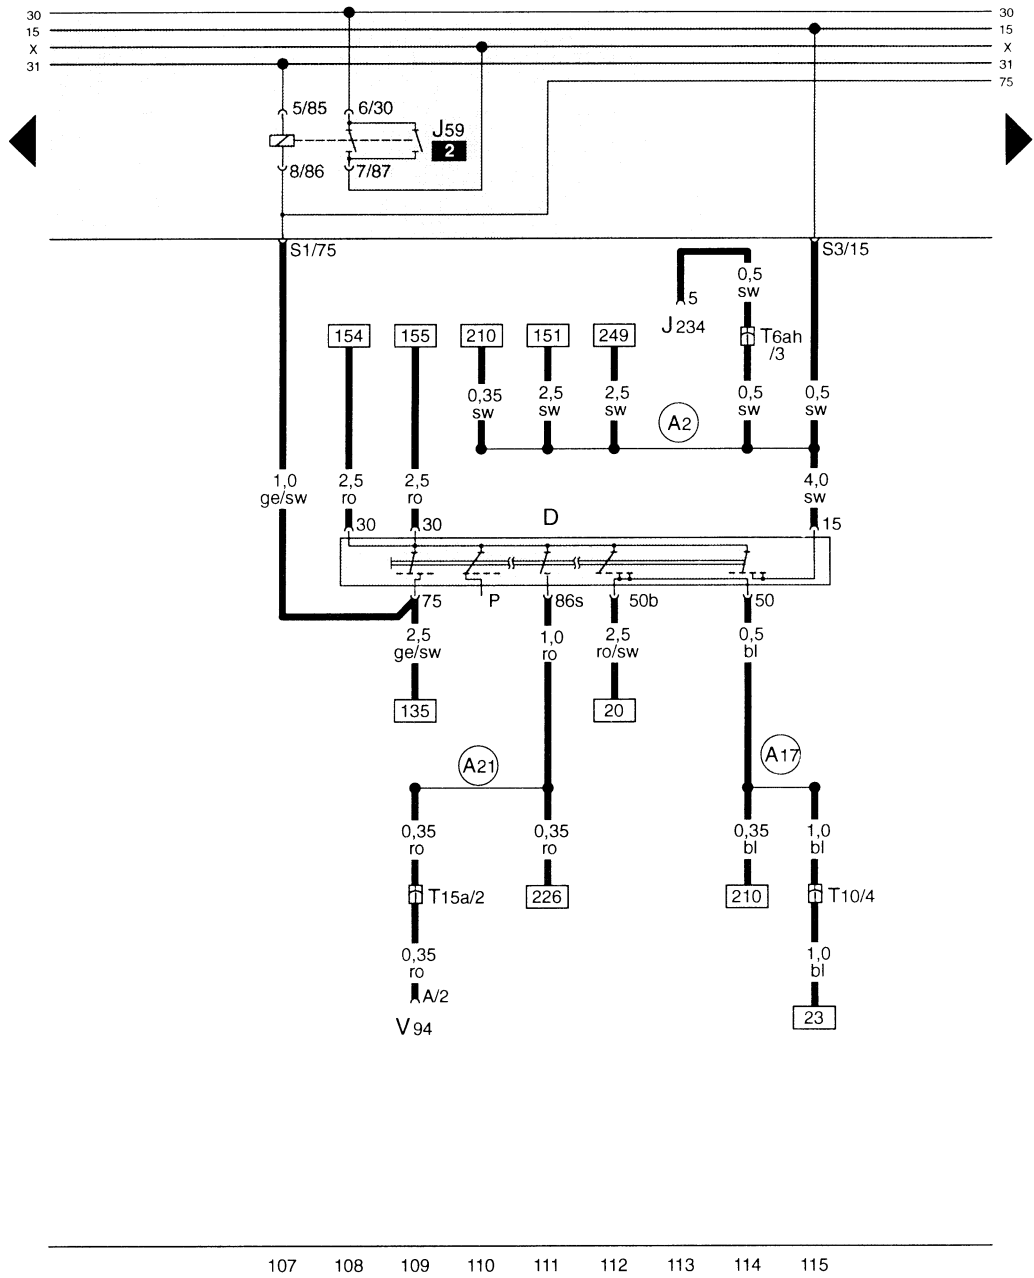

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow


107 108 109 110 111 112 113 114 115

97-19863

D - Ignition/Starter Switch  
 J59 - Load Reduction Relay  
 J234 - Airbag Control Module  
 T6ah - Wire Connector, 6 Point, green, connector station right, A-pillar  
 T10 - Wire Connector, 10 Point, brown, connector station, electronics box in plenum chamber  
 T15a - Wire Connector, 15 Point, black, connector station right, A-pillar  
 V94 - Central Locking / Alarm System / Interior Light Delay Control Module

(A2) - Plus connection (15), in instrument panel wiring harness  
 (A17) - Plus connection (61), in instrument panel wiring harness  
 (A21) - Plus connection (86s), in instrument panel wiring harness

30	30
15	15
X	X
31	31
75	75


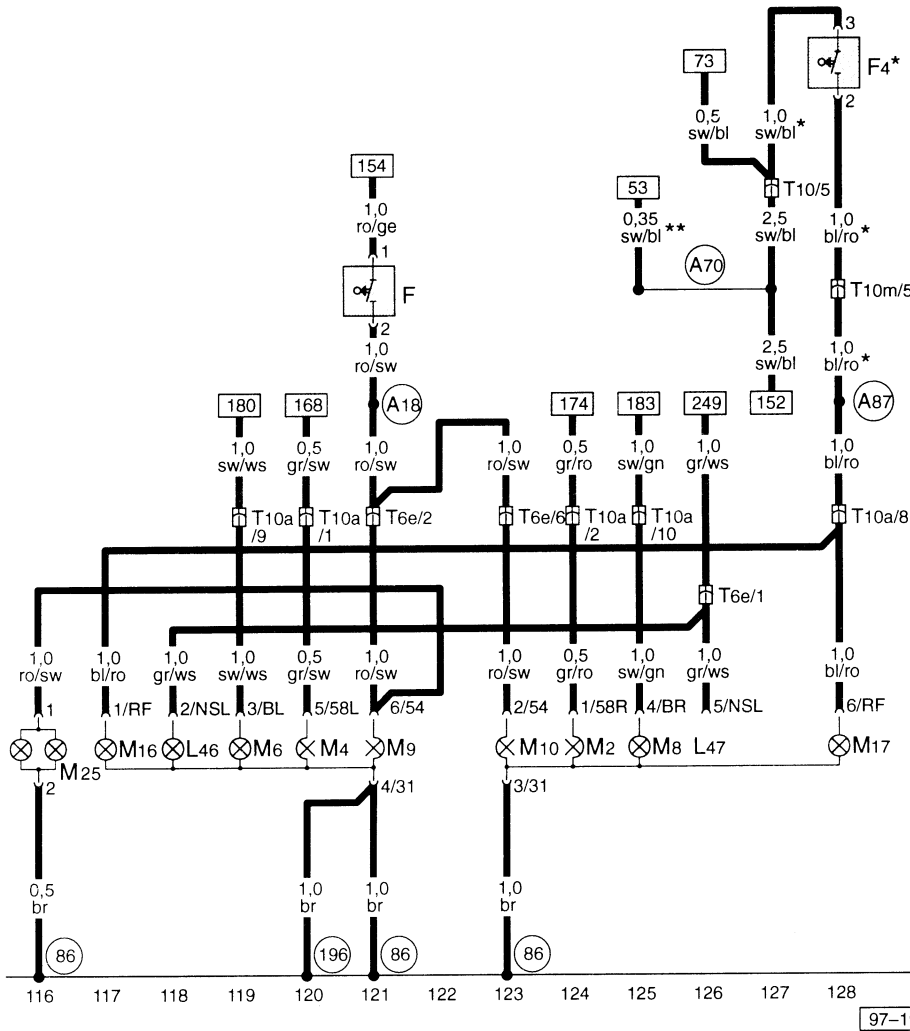


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

97-19864

- F - Brake Light Switch
- F4 - Back-Up Light Switch
- L46 - Left Rear Fog Light
- L47 - Right Rear Fog Light
- M2 - Tail Light, Right
- M4 - Tail Light, Left
- M6 - Turn Signal Light, Left Rear
- M8 - Turn Signal Light, Right Rear
- M9 - Brake Light, Left
- M10 - Brake Light, Right
- M16 - Back-Up Light, Left
- M17 - Back-Up Light, Right
- M25 - High-Mount Brake Light
- T6e - Wire Connector, 6 Point, blue, connector station left, A-Pillar
- T10 - Wire Connector, 10 Point, brown, connector station electronics box in plenum chamber

- T10a - Wire Connector, 10 Point, brown, connector station left, A-pillar
- T10m - Wire Connector, 10 Point, black, connector station, electronics box in plenum chamber
- (86) - Ground connection -1-, in rear wiring harness
- (196) - Ground connection -3-, in rear wiring harness
- (A18) - Wire connection (54), in instrument panel wiring harness
- (A70) - Connector (15a, fuse 231), in instrument panel wiring harness
- (A87) - Connector (reserve lamp), in instrument panel wiring harness
- \* - Manual Transmission Only
- \*\* - Quattro Only

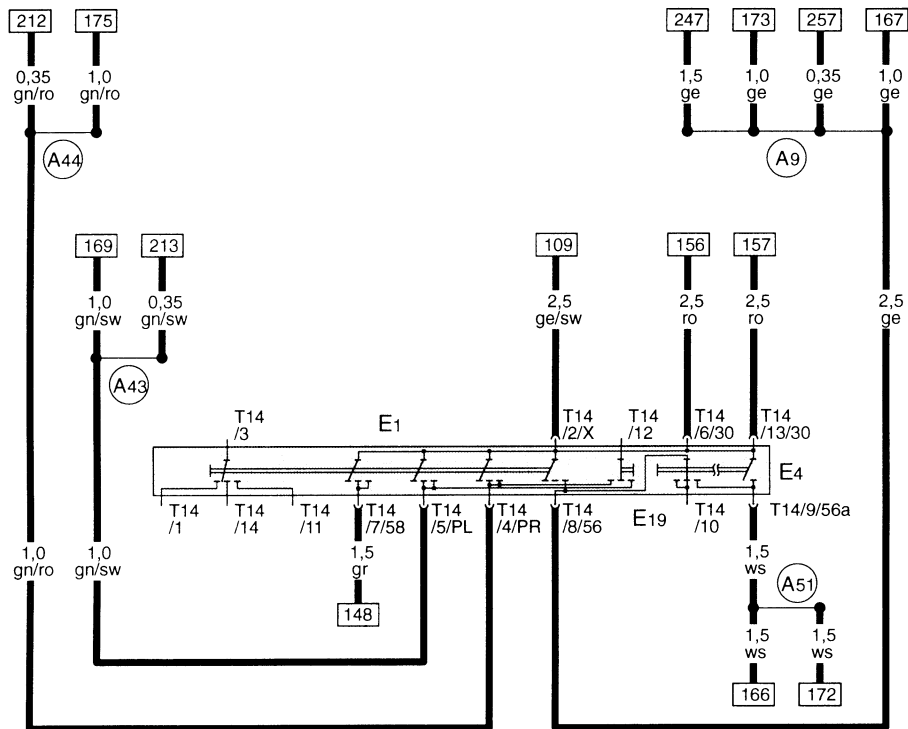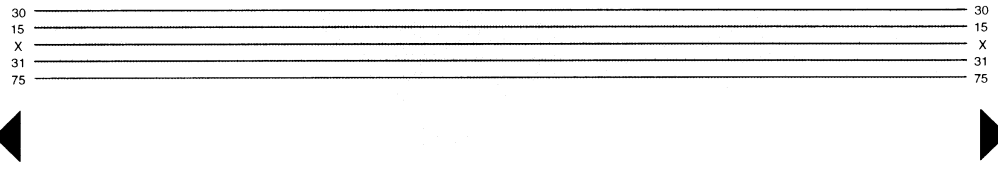


- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

129 130 131 132 133 134 135 136 137 138 139

97-19865


- E1 - Light Switch
- E4 - Headlight Dimmer/Flasher Switch
- E19 - Park Light Switch
- T14 - Wire Connector, 14 Point, black, behind steering column switch cover
- (A9) - Plus connection (56b), in instrument panel wiring harness
- (A43) - Plus connection (57l), in instrument panel wiring harness
- (A44) - Plus connection (57r), in instrument panel wiring harness

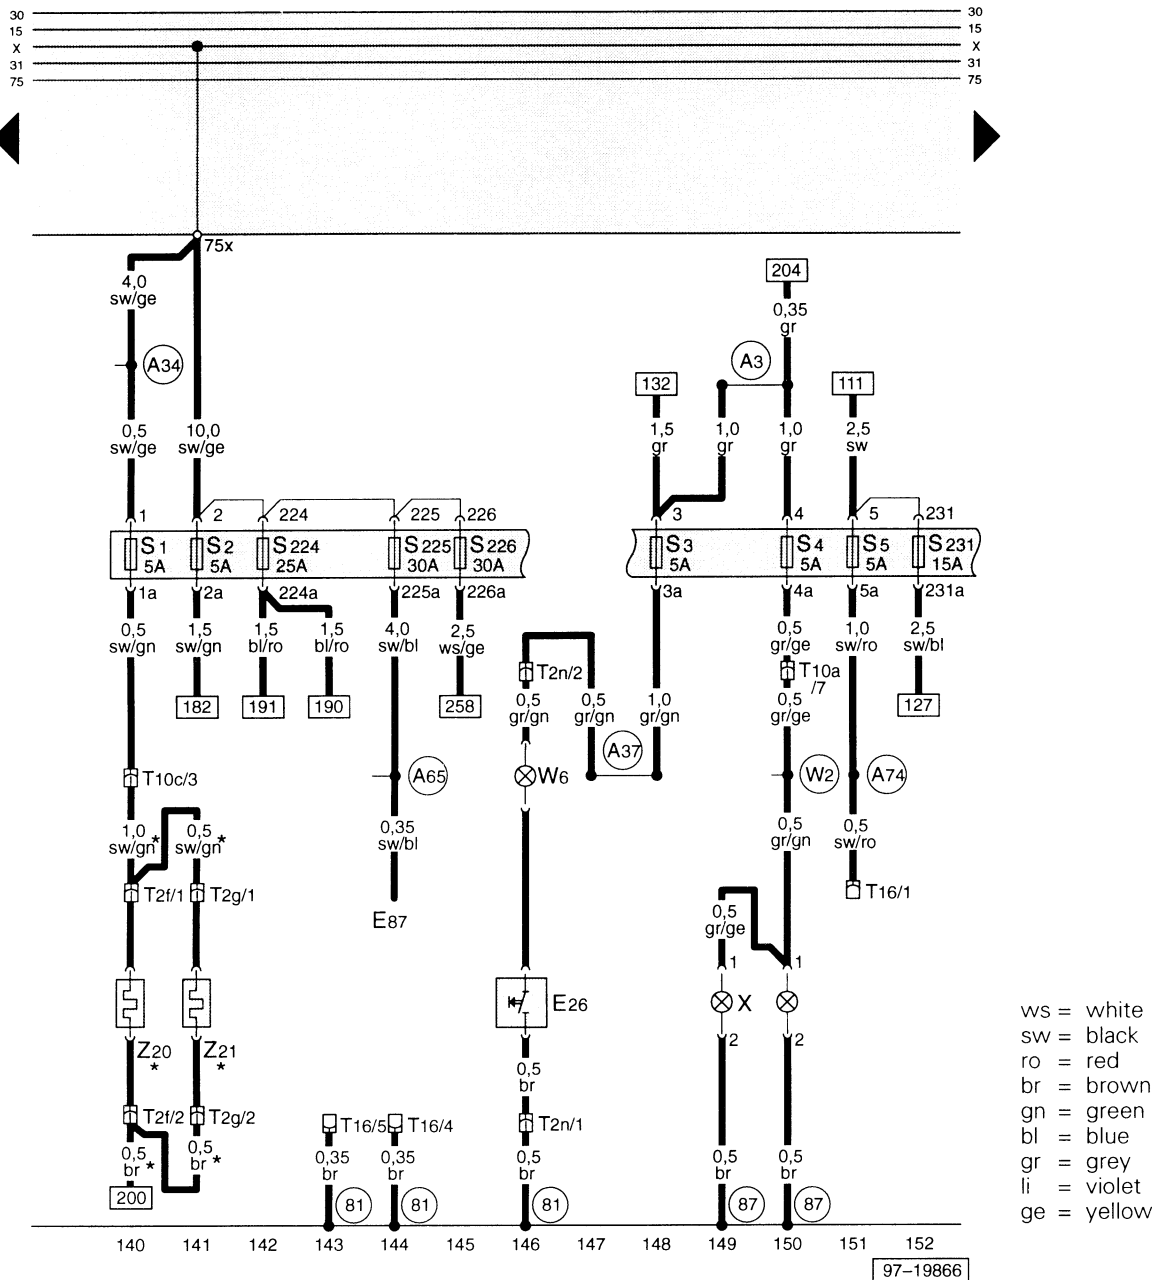

- E26 - Glove Compartment Light Switch
- E87 - A / C Control Head
- T2f - Wire Connector, double, near washer nozzle heater, left
- T2g - Wire Connector, double, near washer nozzle heater, right
- T2n - Wire Connector, double, black, rear glove compartment light
- T10a - Wire Connector, 10 Point, brown, connector station left, A-pillar
- T10c - Wire Connector, 10 Point, violet, connector station left, A-pillar
- T16 - Wire Connector, 16 Point, center console, rear (diagnostic connection)
- V2 - Fresh Air Blower
- W6 - Glove Compartment Light
- X - License Plate Light
- Z20 - Washer Nozzle Heater, Left
- Z21 - Washer Nozzle Heater, Right

- (81) - Ground connection -1-, in instrument panel wiring harness
- (87) - Ground connection -2-, in rear wiring harness
- (A3) - Plus connection (58), in instrument panel wiring harness
- (A34) - Wire connection (75x), in instrument panel wiring harness
- (A37) - Wire connection (58a), in instrument panel wiring harness
- (A65) - Connector (75a, A/C), in instrument panel wiring harness
- (A74) - Connector (15a, fuse 5), in instrument panel wiring harness
- (W2) - Plus Connection (58), in rear wiring harness

\* - Optional For All Models

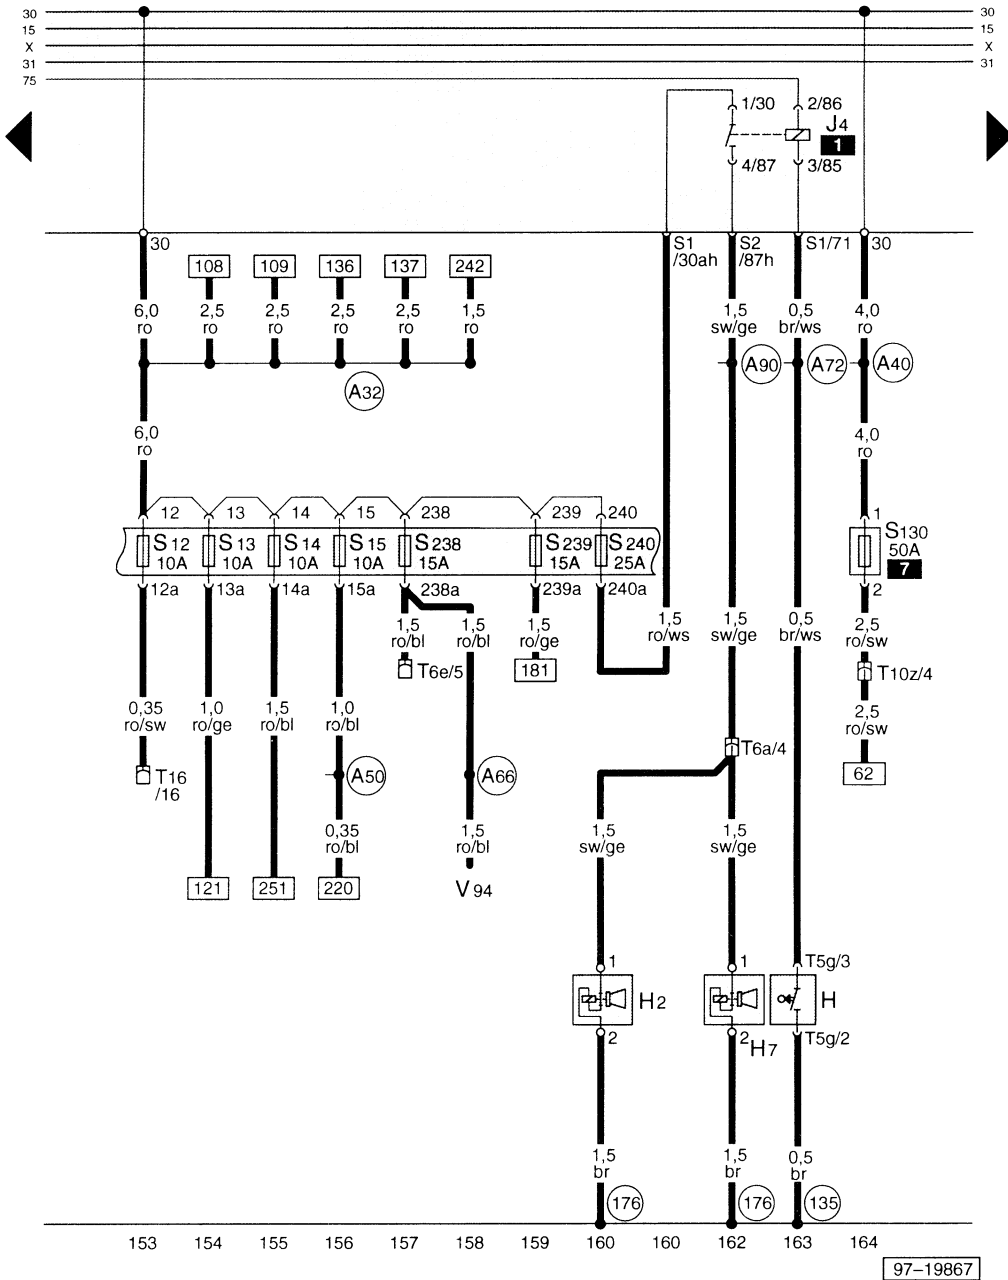


ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- H - Horn Button
- H2 - High Tone Horn
- H7 - Low Tone Horn
- J4 - Dual Horn Relay
- T5g - Wire Connector, 5 Point, behind steering column switch cover
- T6a - Wire Connector, 6 Point, red, connector station right, A-pillar
- T6e - Wire Connector, 6 Point, blue, connector station left, A-pillar
- T10z - Wire Connector, 10 Point, yellow, connector station electronics box in plenum chamber
- T16 - Wire Connector, 16 Point, center console, rear (diagnostic connection)
- V94 - Central Locking / Alarm System / Interior Light Delay Control Module

- (135) - Ground connection -2-, in instrument panel wiring harness
- (176) - Ground connection, in right headlight wiring harness
- (A32) - Plus connection (30), in instrument panel wiring harness
- (A40) - Plus connection -1- (30), in instrument panel wiring harness
- (A50) - Plus connection (30as), in instrument panel wiring harness
- (A66) - Connector (30a, central locking/anti theft warning system/IR), in instrument panel wiring harness
- (A72) - Connector (71), in instrument panel wiring harness
- (A90) - Connector (two-tone horn), in instrument panel wiring harness

30  
15  
X  
31

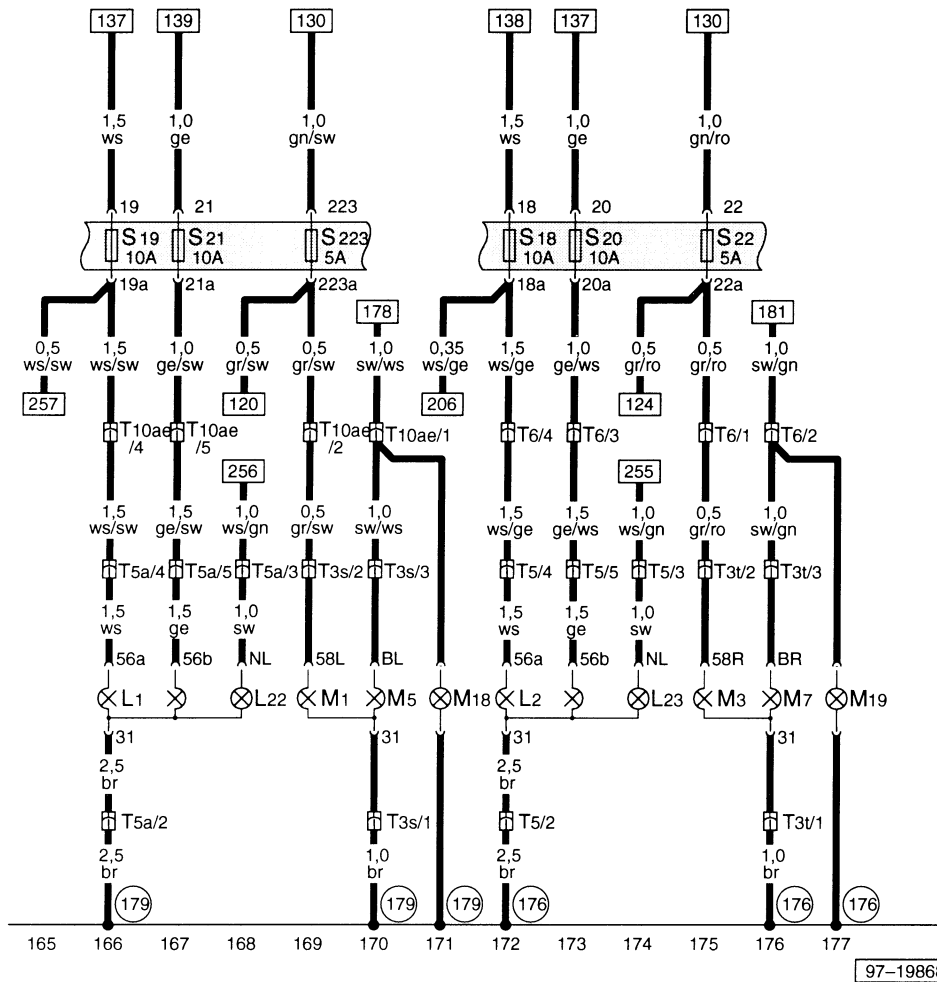


ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = violet  
ge = yellow

- L1 - Headlight, Left
- L2 - Headlight, Right
- L22 - Left Front Fog Light
- L23 - Right Front Fog Light
- M1 - Parking Light, Left
- M3 - Parking Light, Right
- M5 - Turn Signal Light, Left Front
- M7 - Turn Signal Light, Right Front
- M18 - Left, Side Turn Signal Light
- M19 - Right, Side Turn Signal Light
- T3s - Wire Connector, 3 Point, white, near headlight, left
- T3t - Wire Connector, 3 Point, white, near headlight, right
- T5 - Wire Connector, 5 Point, near headlight, right
- T5a - Wire Connector, 5 Point, near headlight, left
- T6 - Wire Connector, 6 Point, yellow, connector station right, A-pillar



- T10ae - Wire Connector, 10 Point, bright pink, connector station left, A-pillar
- (176) - Ground connection, in right headlight wiring harness
- (179) - Ground connection, in left headlight wiring harness



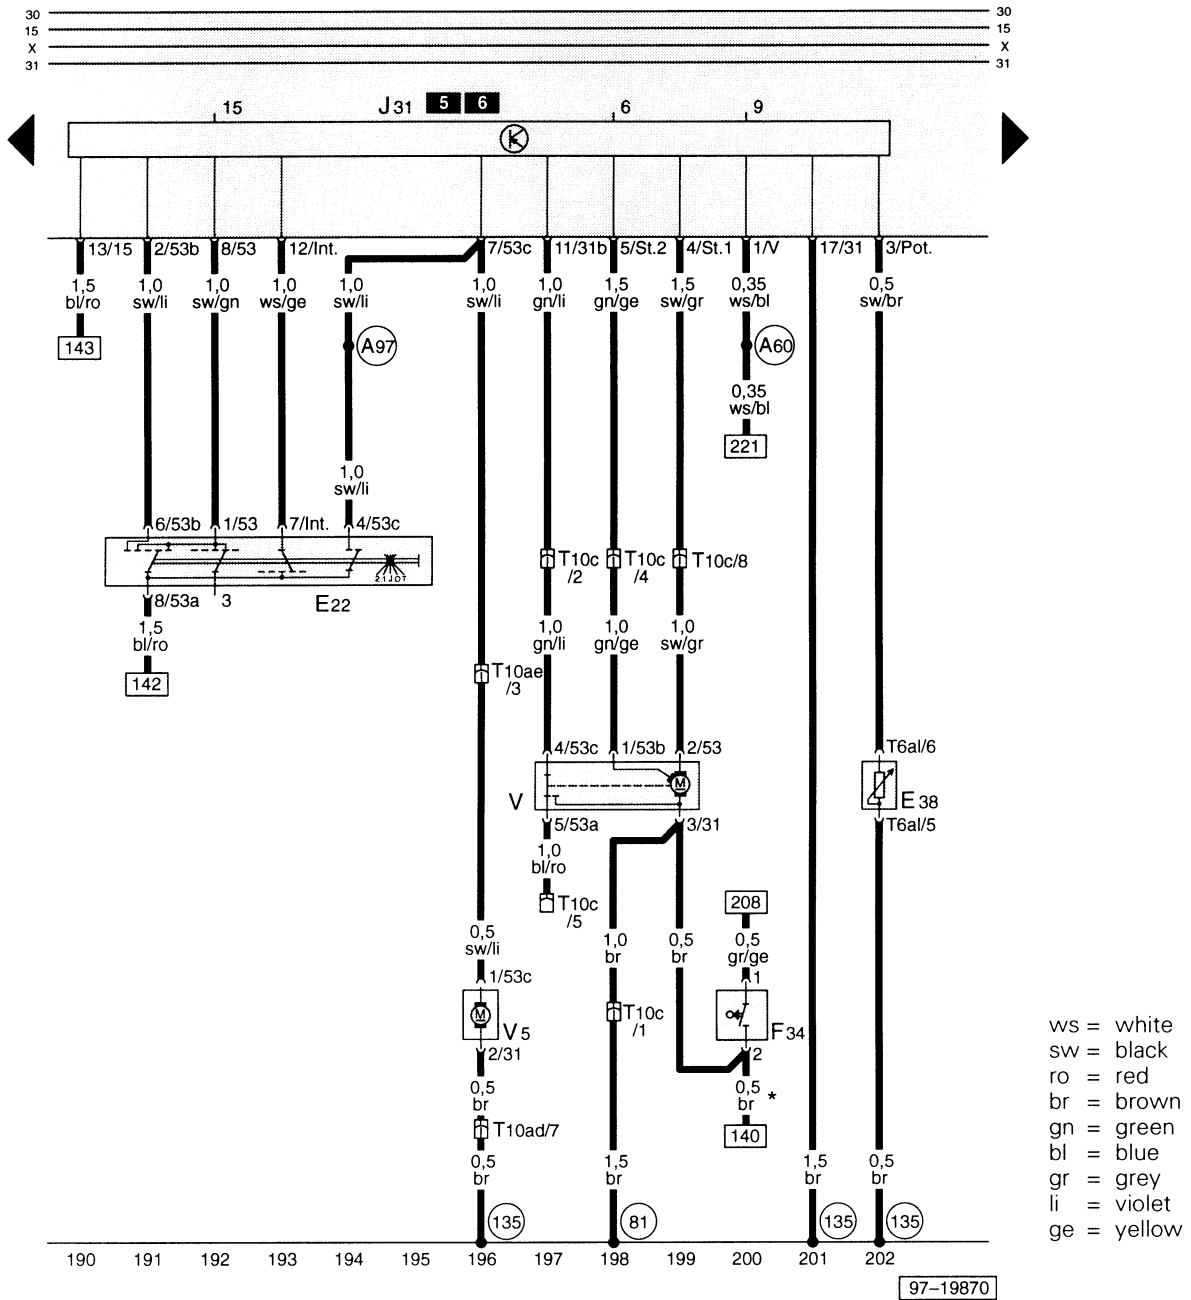

- E22 - Windshield Wiper Intermittent Switch
- E38 - Windshield Wiper Intermittent Regulator
- F34 - Brake Fluid Level Warning Switch
- J31 - Washer / Wiper Intermittent Relay
- T6al - Wire Connector, 6 Point, black, near steering column
- T10c - Wire Connector, 10 Point, violet, connector station left, A-pillar
- T10ad - Wire Connector, 10 Point, red, connector station left, A-pillar
- T10ae - Wire Connector, 10 Point, bright pink, connector station left, A-pillar
- V - Windshield Wiper Motor
- V5 - Windshield Washer Pump
- (81) - Ground connection -1-, in instrument panel wiring harness


 
- (135) - Ground connection -2-, in instrument panel wiring harness
- (A60) - Wire connection (vehicle speed signal), in instrument panel wiring harness
- (A97) - Connector (53), in instrument panel wiring harness
- \* - Optional For All Models

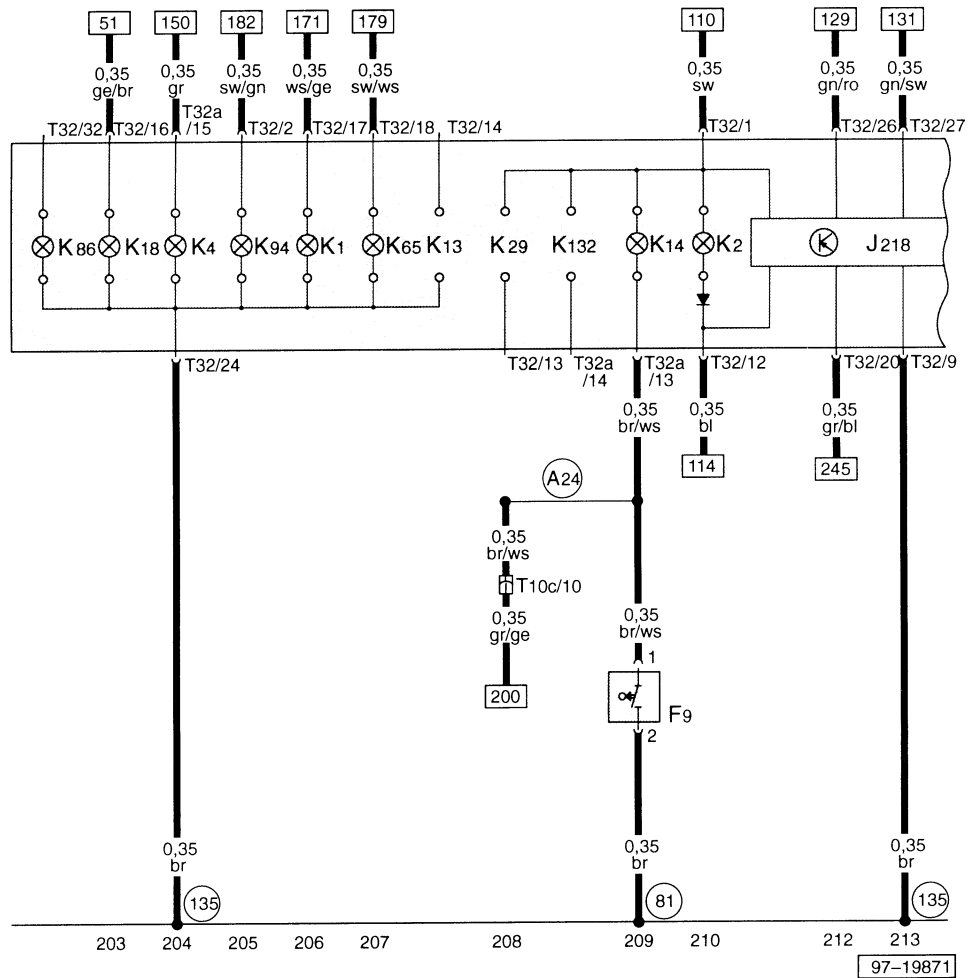

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- F9 - Parking Brake Warning Light Switch
- J218 - Instrument Cluster Combination Processor
- K1 - Headlight High Beam Indicator Light
- K2 - Generator (GEN) Warning Light
- K4 - Park Light Indicator Light
- K13 - Rear Fog Light Indicator Light
- K14 - Parking Brake Indicator Light
- K18 - Trailer Operation Indicator Light
- K29 - Glow Plug Indicator Light
- K65 - Left Turn Signal Indicator Light
- K86 - Traction Control Indicator Light
- K94 - Right Turn Signal Indicator Light
- K132 - Fault light for power accelerator activation
- T10c - Wire Connector, 10 Point, violet, connector station left, A-pillar
- T32 - Wire Connector, 32 Point, blue, on instrument cluster
- T32a - Wire Connector, 32 Point, green, on instrument cluster


 
- (81) - Ground connection -1-, in instrument panel wiring harness
- (135) - Ground connection -2-, in instrument panel wiring harness
- (A24) - Wire connection (brake system monitoring), in instrument panel wiring harness

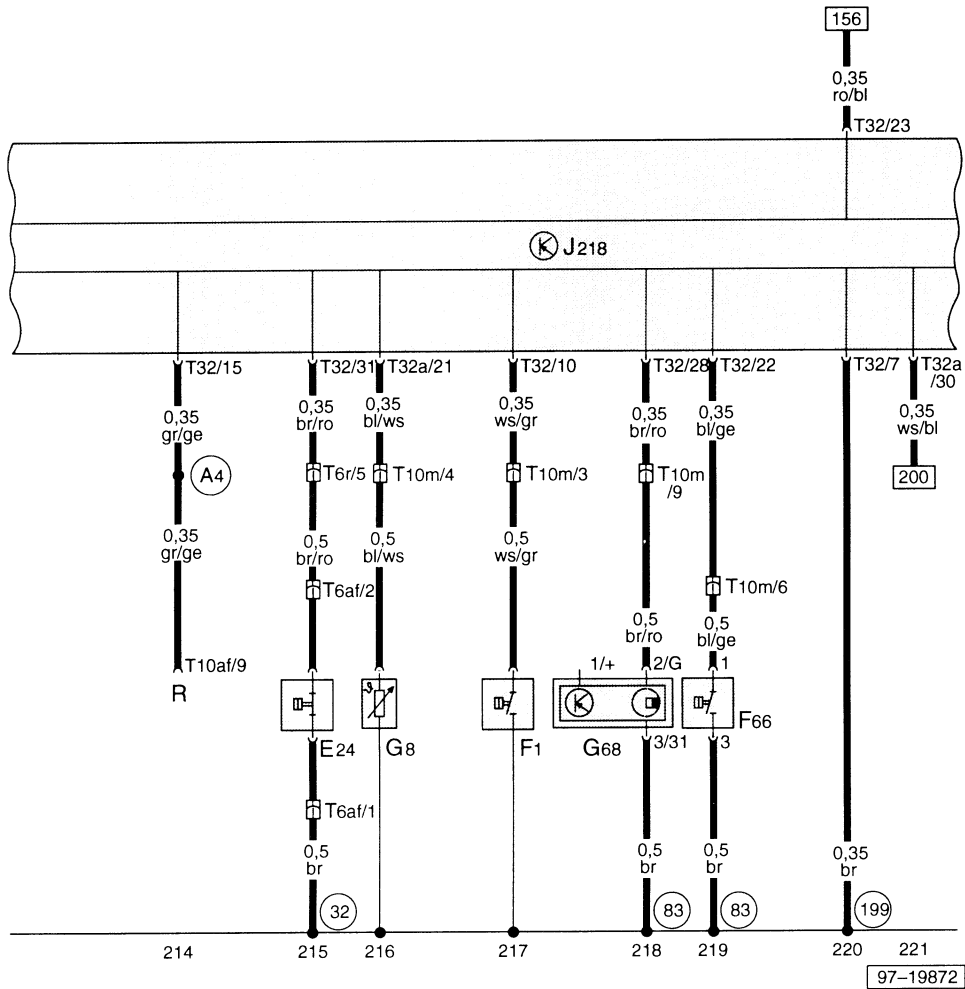

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- E24 - Seat Belt Switch, Left
- F1 - Oil Pressure Switch
- F66 - Engine Coolant Level (ECL) Warning Switch
- G8 - Engine Oil Temperature Sensor
- G68 - Vehicle Speed Sensor (VSS)
- J218 - Instrument Cluster Combination Processor
- R - Radio
- T6r - Wire Connector, 6 Point, white, connector station left, A-pillar
- T6af - Wire Connector, 6 Point, black, below driver's seat
- T10m - Wire Connector, 10 Point, black, connector station, electronics box in plenum chamber
- T10af - Wire Connector, 10 Point, red, on Radio
- T32 - Wire Connector, 32 Point, blue, on instrument cluster
- T32a - Wire Connector, 32 Point, green, on instrument cluster

 - 32 - Ground connection, behind instrument panel, left
- 83 - Ground connection -1-, in right front wiring harness
- 199 - Ground connection -3-, in instrument panel wiring harness

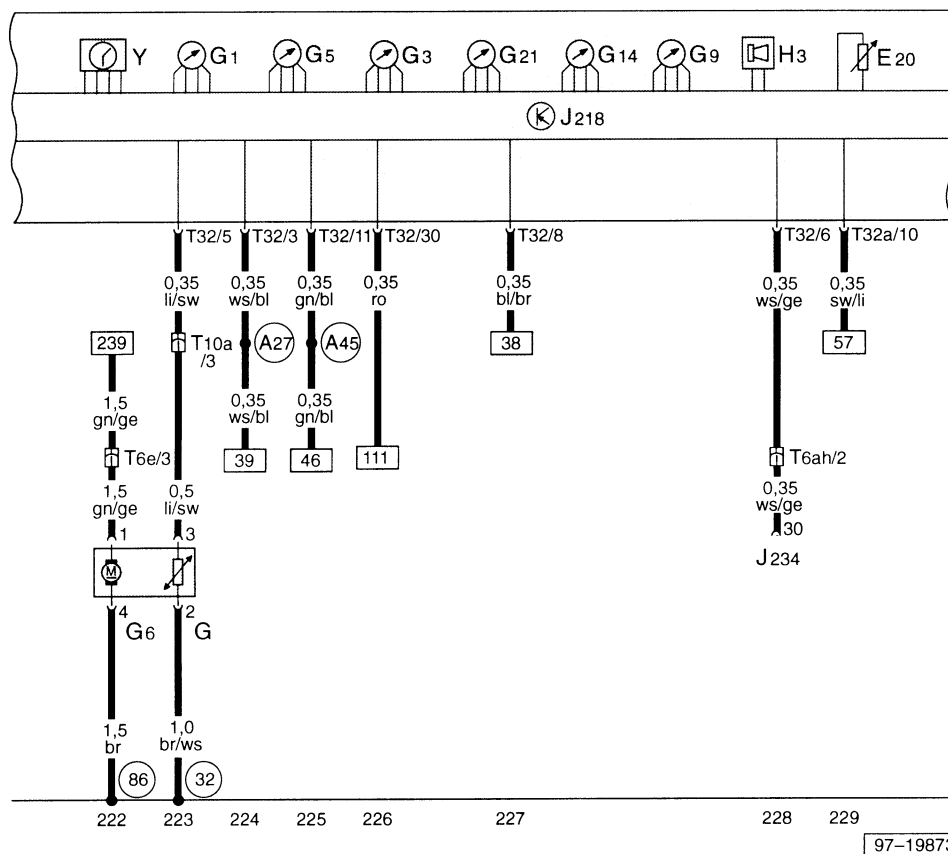



- ws = white
- sw = black
- ro = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = violet
- ge = yellow

- E20 - Instrument Panel Light Dimmer Switch
- G - Fuel Level Sensor
- G1 - Fuel Gauge
- G3 - Engine Coolant Temperature (ECT) Gauge
- G5 - Tachometer
- G6 - Fuel Pump
- G9 - Engine Oil Temperature Gauge
- G14 - Voltmeter
- G21 - Speedometer
- H3 - Warning Buzzer
- J218 - Instrument Cluster Combination Processor
- J234 - Airbag Control Module
- T6e - Wire Connector, 6 Point, blue, connector station left, A-pillar
- T6ah - Wire Connector, 6 Point, green, connector station right, A-pillar

- T10a - Wire Connector, 10 Point, brown, connector station left, A-pillar
- T32 - Wire Connector, 32 Point, blue, on instrument cluster
- T32a - Wire Connector, 32 Point, green, on instrument cluster
- Y - Analog Clock
- (32) - Ground connection, behind instrument panel, left
- (86) - Ground connection -1-, in rear wiring harness
- (A27) - Wire connection (vehicle speed signal), in instrument panel wiring harness
- (A45) - Wire connection (RPM signal), in instrument panel wiring harness



97-19873

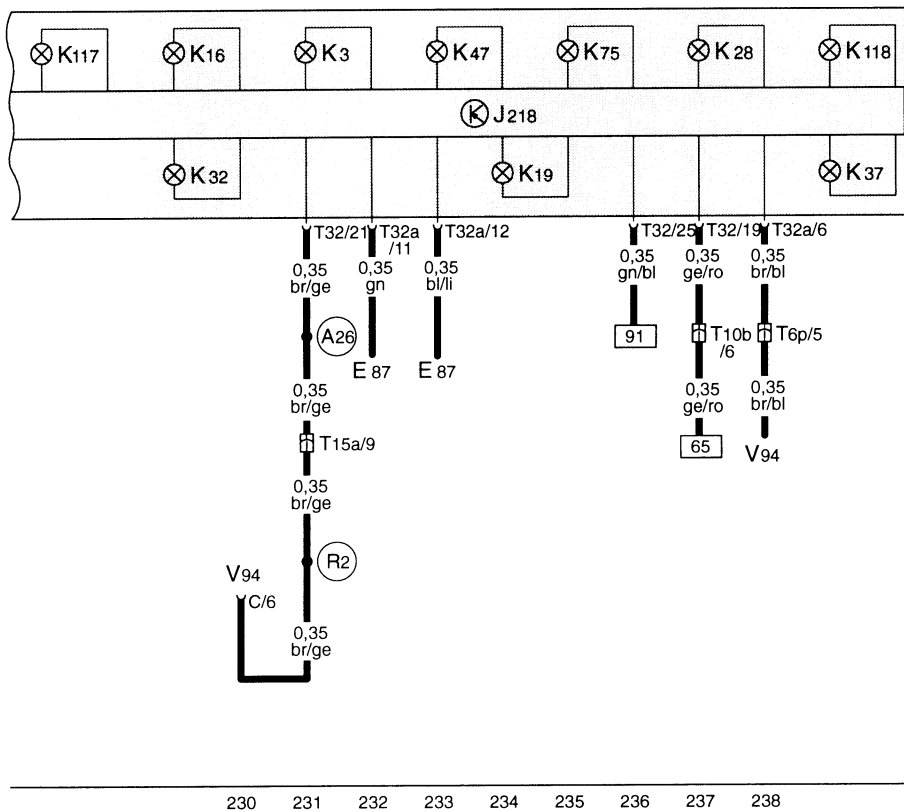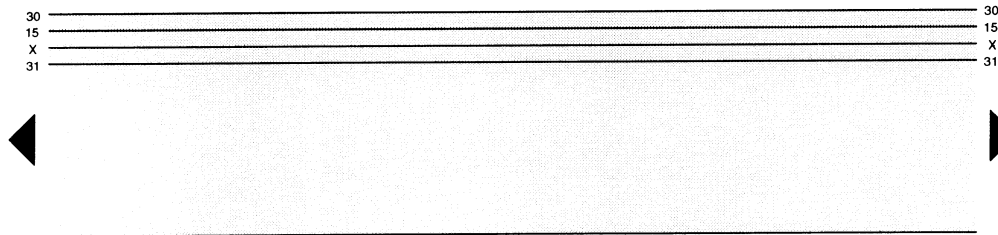

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

- E87 - A / C Control Head
- J218 - Instrument Cluster Combination Processor
- K3 - Oil Pressure Warning Light
- K16 - Fuel Reserve Warning Light
- K19 - Seat Belt Warning Light
- K28 - Engine Coolant Level / Temperature (ECL/ECT) Warning Light
- K32 - Brake Pad Wear Indicator Light
- K37 - Low Windshield Washer Fluid Level Indicator Light
- K47 - ABS Warning Light
- K75 - Airbag Malfunction Indicator Lamp (MIL)
- K117 - Warning light for anti-theft immobilizer sensor
- K118 - Warning light for brake system
- T6p - Wire Connector, 6 Point, white, connector station left, A-pillar
- T10b - Wire Connector, 10 Point, orange, connector station left, A-pillar


 
- T15a - Wire Connector, 15 Point, black, connector station right, A-pillar
- T32 - Wire Connector, 32 Point, blue, on instrument cluster
- T32a - Wire Connector, 32 Point, green, on instrument cluster
- V94 - Central Locking / Alarm System / Interior Light Delay Control Module
- (A26) - Wire connection (driver's door contact switch), in instrument panel wiring harness
- (R2) - Wire connection (door contact switch, left), in central locking system wiring harness

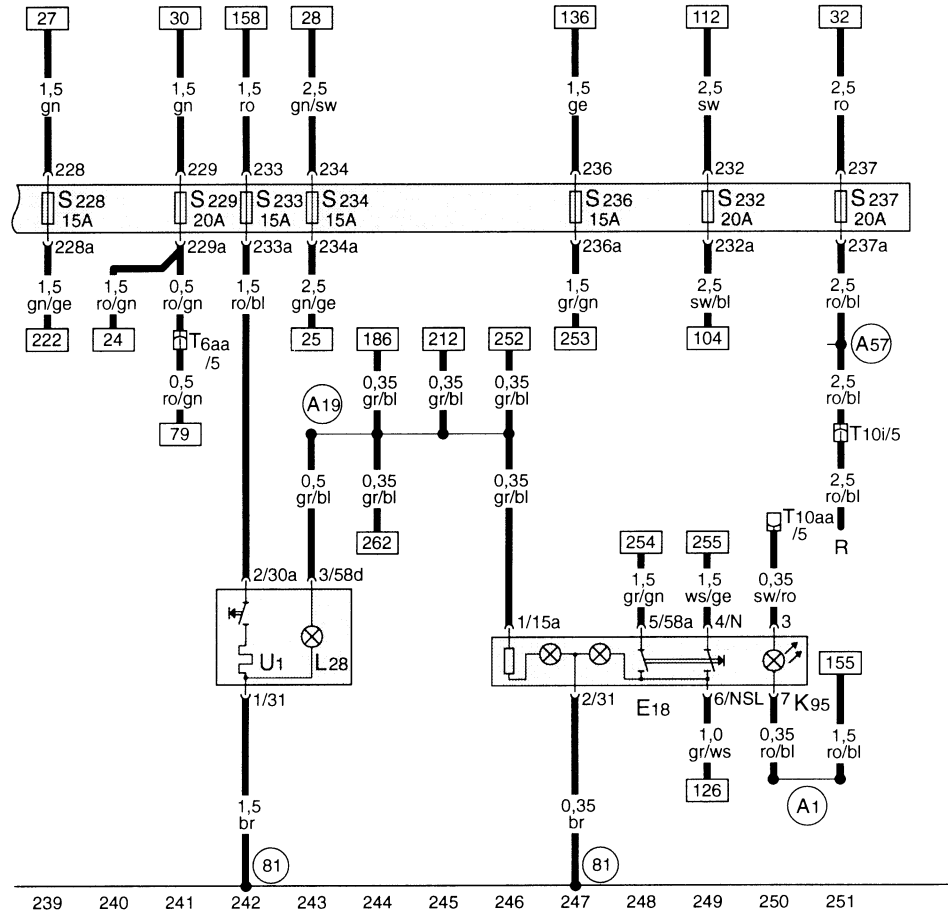

ws = white  
 sw = black  
 ro = red  
 br = brown  
 gn = green  
 bl = blue  
 gr = grey  
 li = violet  
 ge = yellow

97-19875

 - E18 - Rear Fog Light Switch
  - K95 - Alarm System Indicator Light
  - L28 - Cigarette Lighter Light
  - R - Radio
  - T6aa - Wire Connector, 6 Point, brown, connector station right, A-pillar
  - T10i - Wire Connector, 10 Point, black, in center console
  - T10aa - Wire Connector, 10 Point, orange, connector station left, A-pillar
  - U1 - Cigarette Lighter
  - W - Front Interior Light
  - W14 - Right Make-up Mirror Light
  - W20 - Left Make-up Mirror Light
- (81) - Ground connection -1-, in instrument panel wiring harness
  - (A1) - Plus connection (30a), in instrument panel wiring harness
  - (A19) - Wire connection (58d), in instrument panel wiring harness
  - (A57) - Wire connection (30c), in instrument panel wiring harness

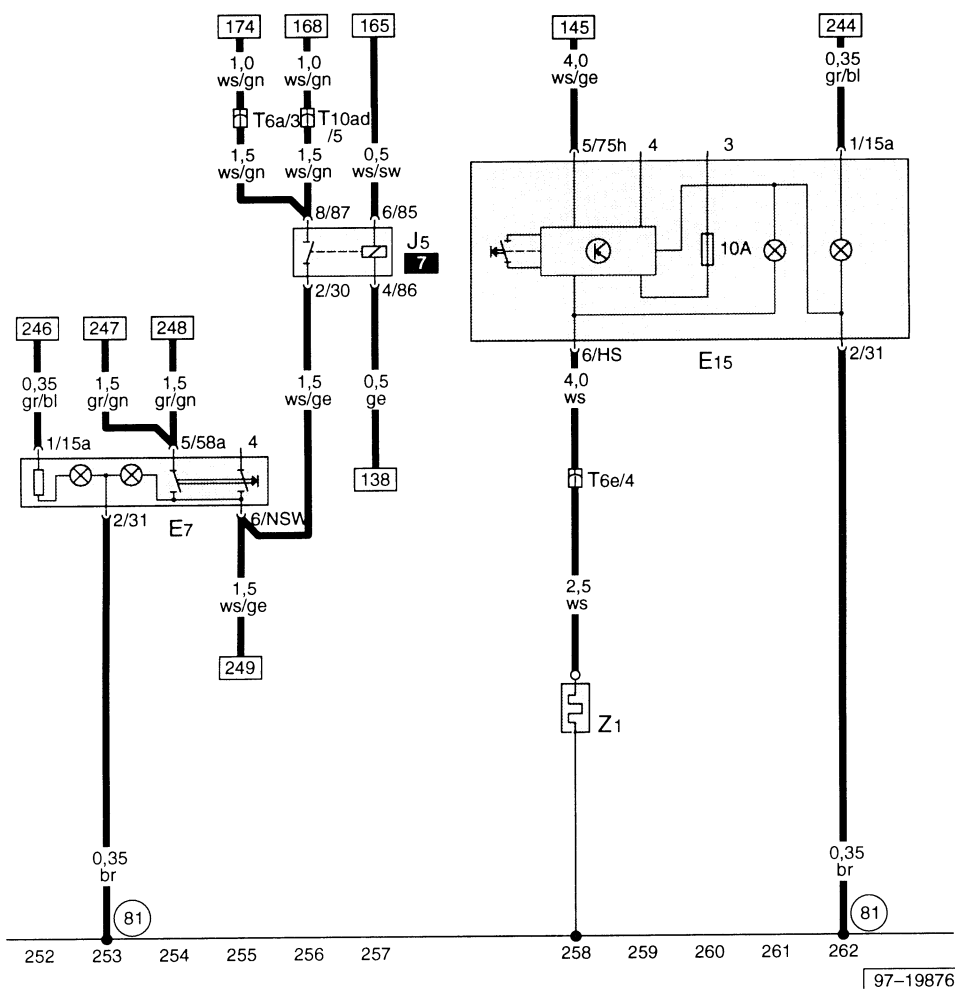

ws = white  
sw = black  
ro = red  
br = brown  
gn = green  
bl = blue  
gr = grey  
li = violet  
ge = yellow

- E7 - Fog Light Switch
- E15 - Rear Window Defogger Switch
- J5 - Fog Light Relay
- T6a - Wire Connector, 6 Point, red, connector station right, A-pillar
- T6e - Wire Connector, 6 Point, blue, connector station left, A-pillar
- T10ad - Wire Connector, 10 Point, red, connector station left, A-pillar
- Z1 - Rear Window Defogger / Heat Element
- (81) - Ground connection -1-, behind instrument panel wiring harness